
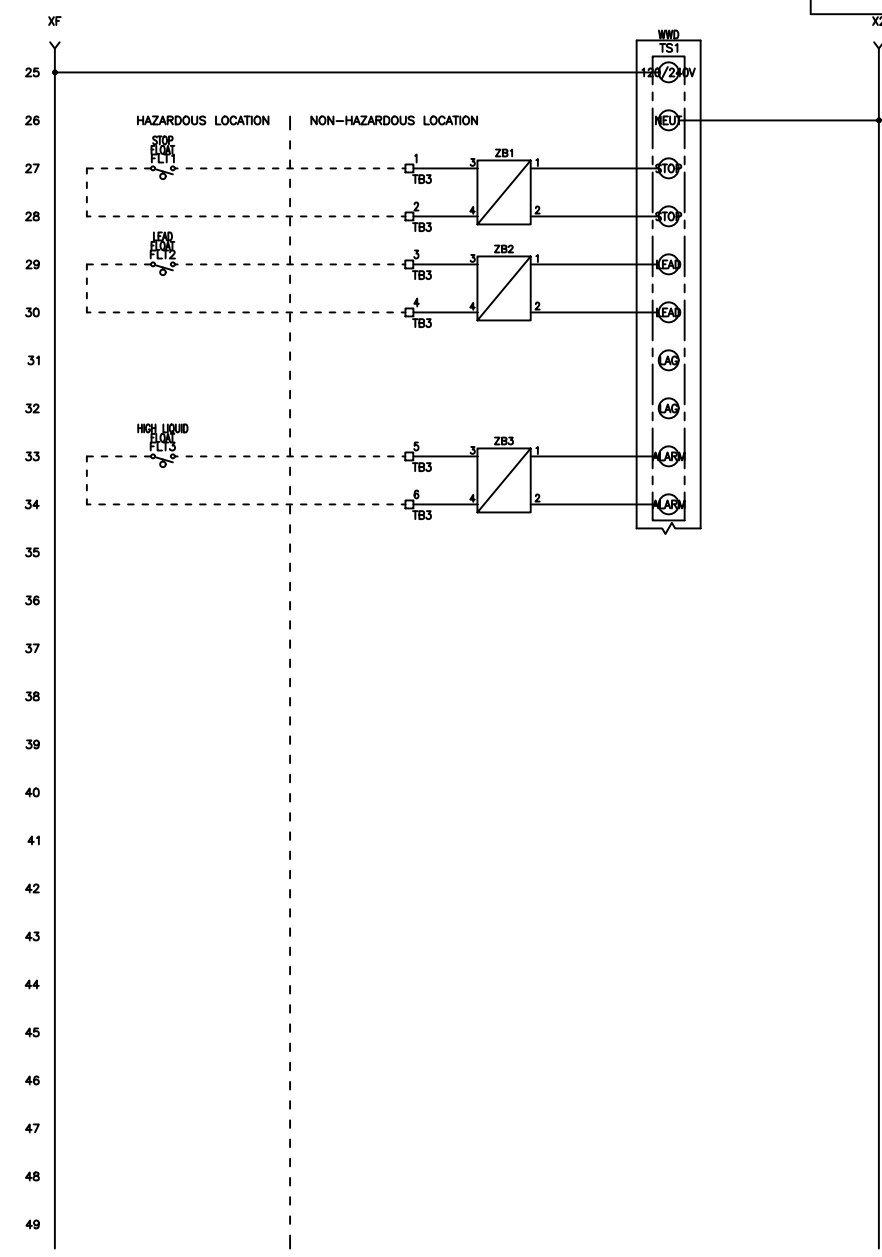


FNAME: IS-WS3P-TP-300X

REVDATE: 0318

REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED
	A	ADDITION OF OPTIONAL SEAL FAIL RELAY	1/17/15	
	B	UPDATED INSTRUCTIONS	5/25/17	
	C	REVISED CB1	9/21/17	
	D	SPLIT TERMINAL BLOCK 1, UPDATED SEAL FAIL	3/12/18	
	E	Transformer Label X1 to XF	4/29/19	

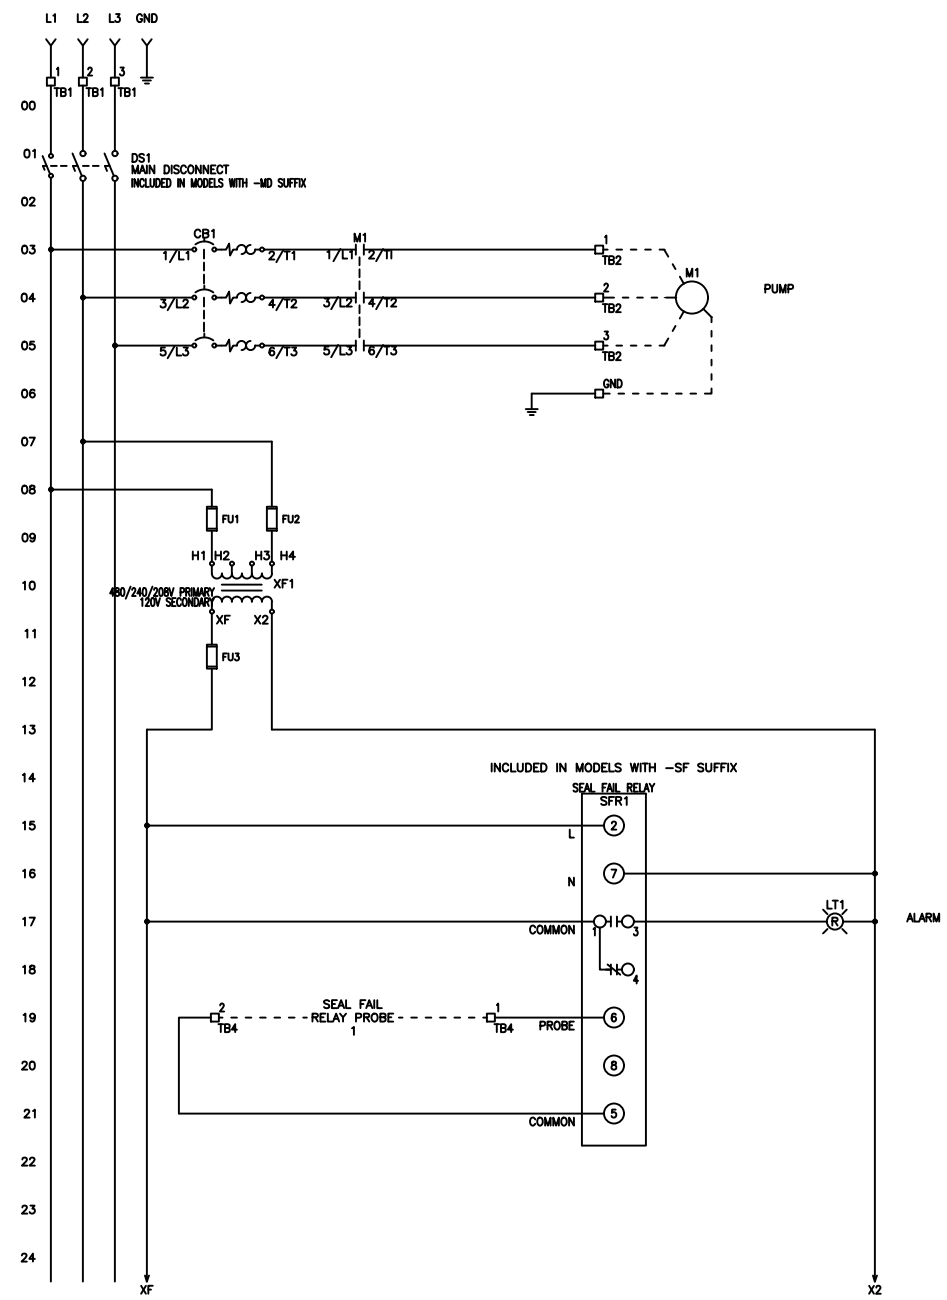

MULTITAP TRANSFORMER INSTRUCTIONS:

CONNECT FACTORY TAGGED WIRES TO APPROPRIATE TRANSFORMER VOLTAGE TAP. SEE BELOW FOR CONNECTIONS:

FOR 208V OPERATION, CONNECT TO FUSE INPUT HF & TO TRANSFORMER TAP H2

FOR 240V OPERATION, CONNECT TO FUSE INPUT HF & TO TRANSFORMER TAP H3

FOR 480V OPERATION, CONNECT TO FUSE INPUT HF & TO TRANSFORMER TAP H4

----- DASHED LINE INDICATES FIELD WIRING.

USE COPPER CONDUCTORS ONLY.

TEMPERATURE RATING OF CONDUCTORS IS TO BE 60°C (167°F).

BRANCH CIRCUIT PROTECTION SHALL BE PROVIDED BY THE INSTALLER. MUST BE SIZED ACCORDING TO PUMP/MOTOR MANUFACTURING SPECIFICATIONS.

VERIFY CORRECT OPERATION OF CONTROL PANEL AFTER INSTALLATION IS COMPLETE.

DRAWN BY: KJ
DATE: 1/6/15

APPROVED BY: _____
DATE: _____




THIS DRAWING CONTAINS PROPRIETARY INFORMATION AND SHALL NOT BE USED OR DISCLOSED WITHOUT PRIOR WRITTEN AUTHORIZATION.

TITLE: IS-WS3P-TP-300X CONTROL SCHEMATIC			
SIZE B	DWG NO. 1532	PART NO. IS-WS3P-TP-300X	REV E
SCALE NONE		SHEET 1 OF 3	

FRAME: IS-WS3P-TP-300X

REVDATE: 0318

REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED
	A	ADDITION OF OPTIONAL SEAL FAIL RELAY	1/17/15	
	B	UPDATED INSTRUCTIONS	5/25/17	
	C	REVISED CB1	9/21/17	
	D	SPLIT TERMINAL BLOCK 1, UPDATED SEAL FAIL	3/12/18	
	E	Transformer Label X1 to XF	4/29/19	

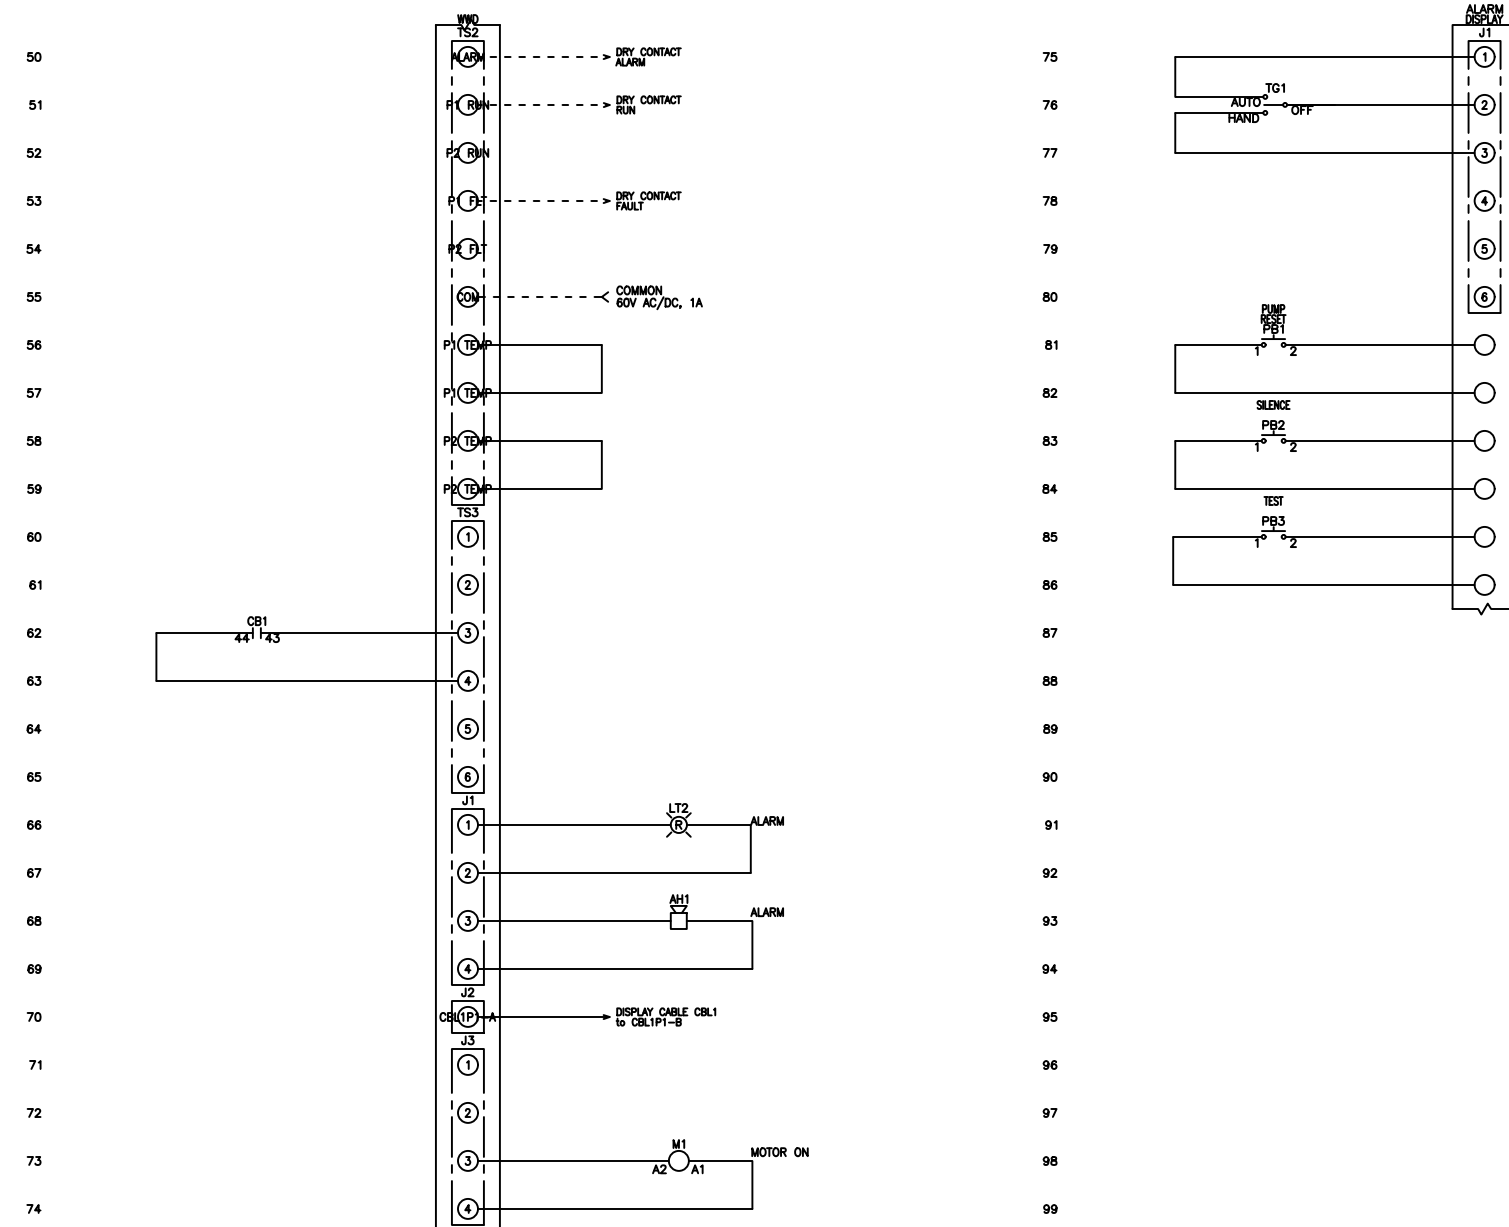

MULTITAP TRANSFORMER INSTRUCTIONS:

CONNECT FACTORY TAGGED WIRES TO APPROPRIATE TRANSFORMER VOLTAGE TAP. SEE BELOW FOR CONNECTIONS:

FOR 208V OPERATION, CONNECT TO FUSE INPUT HF & TO TRANSFORMER TAP H2

FOR 240V OPERATION, CONNECT TO FUSE INPUT HF & TO TRANSFORMER TAP H3

FOR 480V OPERATION, CONNECT TO FUSE INPUT HF & TO TRANSFORMER TAP H4

----- DASHED LINE INDICATES FIELD WIRING.

USE COPPER CONDUCTORS ONLY.

TEMPERATURE RATING OF CONDUCTORS IS TO BE 60°C (167°F).

BRANCH CIRCUIT PROTECTION SHALL BE PROVIDED BY THE INSTALLER. MUST BE SIZED ACCORDING TO PUMP/MOTOR MANUFACTURING SPECIFICATIONS.


VERIFY CORRECT OPERATION OF CONTROL PANEL AFTER INSTALLATION IS COMPLETE.

DRAWN BY:	DATE:	SEEWATER <i>Inc.</i>		
KJ	1/6/15			
APPROVED BY:	DATE:	TITLE:		
		IS-WS3P-TP-300X CONTROL SCHEMATIC		
SIZE	DWG NO.	PART NO.	REV	
B	1532	IS-WS3P-TP-300X	E	
SCALE	NONE	SHEET	2 OF 3	


THIS DRAWING CONTAINS PROPRIETARY INFORMATION AND SHALL NOT BE USED OR DISCLOSED WITHOUT PRIOR WRITTEN AUTHORIZATION.

FNAME: IS-WS3P-TP-300X

REVDATE: 0318

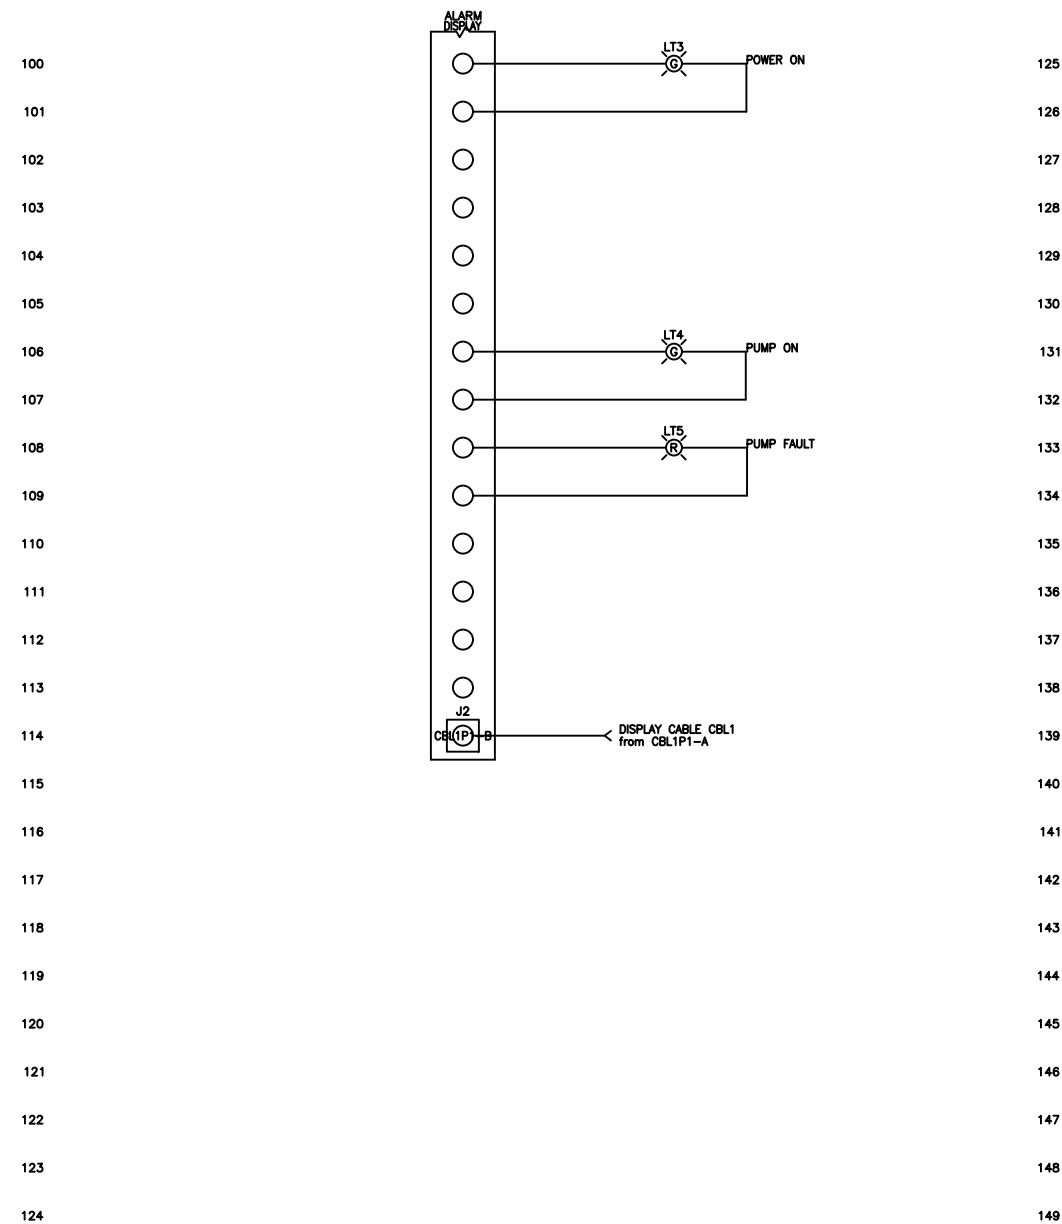

REVISIONS				
ZONE	REV	DESCRIPTION	DATE	APPROVED
	A	ADDITION OF OPTIONAL SEAL FAIL RELAY	1/17/15	
	B	UPDATED INSTRUCTIONS	5/25/17	
	C	REVISED CB1	9/21/17	
	D	SPLIT TERMINAL BLOCK 1, UPDATED SEAL FAIL	3/12/18	
	E	Transformer Label X1 to XF	4/29/19	

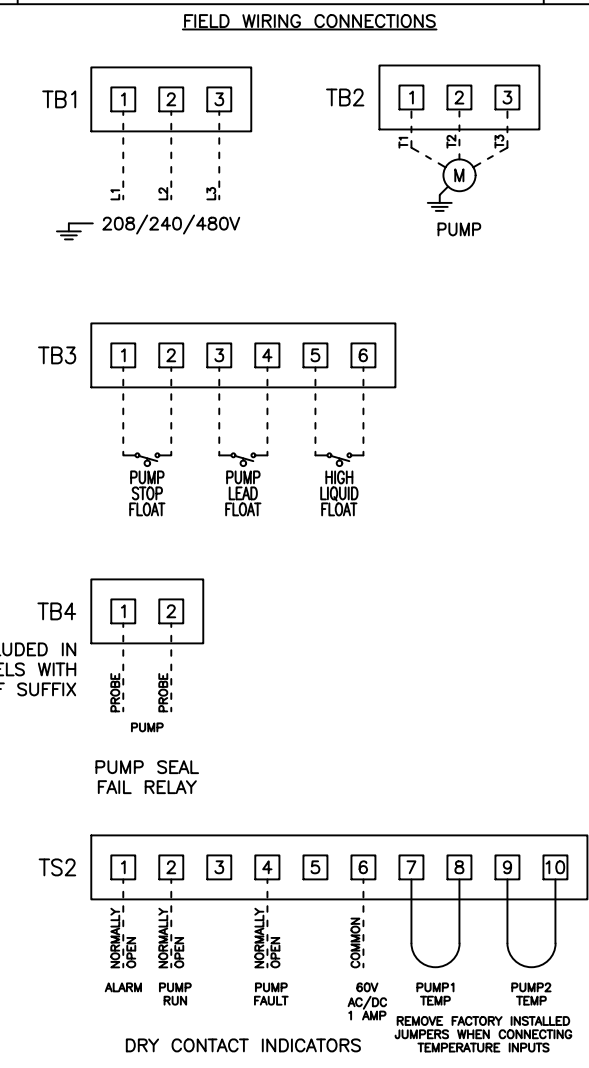

MULTITAP TRANSFORMER INSTRUCTIONS:

CONNECT FACTORY TAGGED WIRES TO APPROPRIATE TRANSFORMER VOLTAGE TAP. SEE BELOW FOR CONNECTIONS:

FOR 208V OPERATION, CONNECT TO FUSE INPUT HF & TO TRANSFORMER TAP H2

FOR 240V OPERATION, CONNECT TO FUSE INPUT HF & TO TRANSFORMER TAP H3

FOR 480V OPERATION, CONNECT TO FUSE INPUT HF & TO TRANSFORMER TAP H4

----- DASHED LINE INDICATES FIELD WIRING.

USE COPPER CONDUCTORS ONLY.

TEMPERATURE RATING OF CONDUCTORS IS TO BE 60°C (167°F).

BRANCH CIRCUIT PROTECTION SHALL BE PROVIDED BY THE INSTALLER. MUST BE SIZED ACCORDING TO PUMP/MOTOR MANUFACTURING SPECIFICATIONS.

VERIFY CORRECT OPERATION OF CONTROL PANEL AFTER INSTALLATION IS COMPLETE.

DRAWN BY: KJ		DATE: 1/6/15		SEEWATER Inc.			
APPROVED BY:		DATE:					
THIS DRAWING CONTAINS PROPRIETARY INFORMATION AND SHALL NOT BE USED OR DISCLOSED WITHOUT PRIOR WRITTEN AUTHORIZATION.				TITLE: IS-WS3P-TP-300X CONTROL SCHEMATIC			
				SIZE: B	DWG NO.: 1532	PART NO.: IS-WS3P-TP-300X	REV: E
				SCALE: NONE		SHEET: 3 OF 3	